


DEEP SEATING SWING INSTRUCTIONS

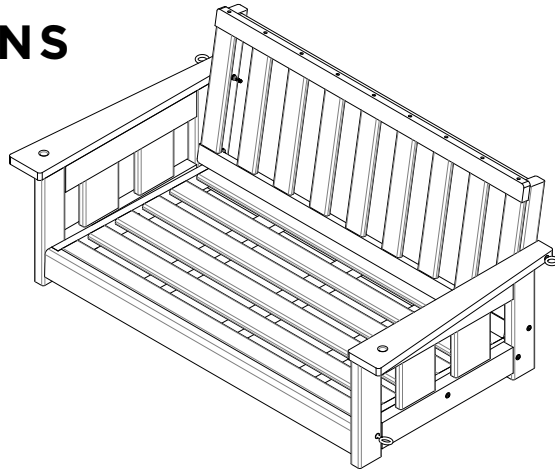

COMPONENTS

- Left Arm Assembly
- Right Arm Assembly
- Seat Assembly
- Back Assembly
- Chain Assembly
- Hardware Pack


HARDWARE PACK

Weight : 4.6 OZ

- (4) 2" Barrel Bolts
- (2) 2.5" Barrel Bolts
- (6) Barrel Nuts
- (1) Allen Wrench
- Chain Assembly
- Chain Sets: (2) Eye Bolts, nuts, and washers attached
- Tree Hooks (2)

SUGGESTED TOOLS


- Rubber Mallet
- Phillips Head Screw Driver
- Drill
- 1/2" Wrench

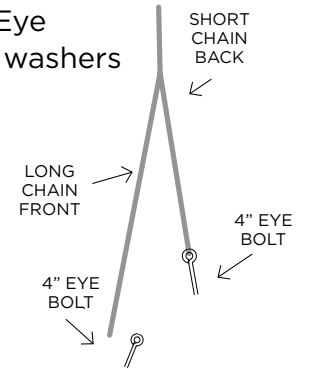


Note: Chains come attached to arms.

ASSEMBLY

STEP 1a. Using (2) 2" Bolts and (2) Barrel Nuts attach the Left Arm Assembly to the Seat Base. Repeat with the Right Arm Assembly. **Keep Hardware loose until Step 1b.**

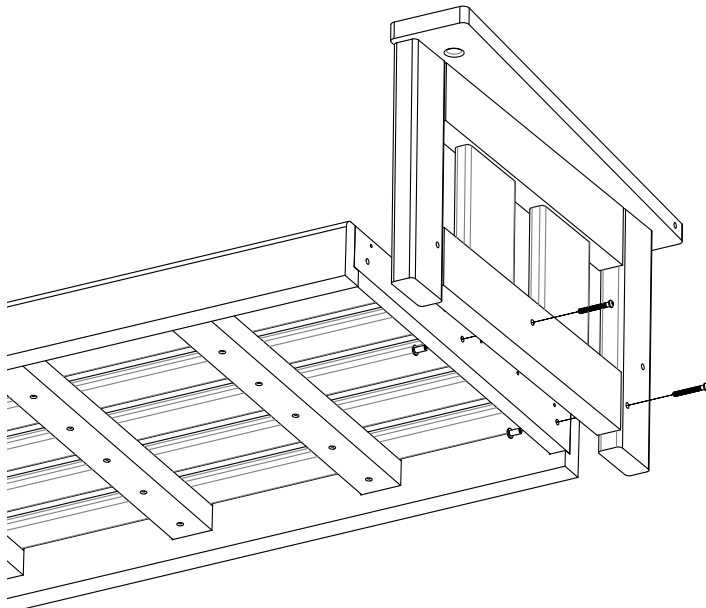


STEP 1b. After both Arm Assemblies are attached use the eyebolts connected to a chain running through the arm to tighten the arm assemblies to the seat base. **Tighten the hardware.**

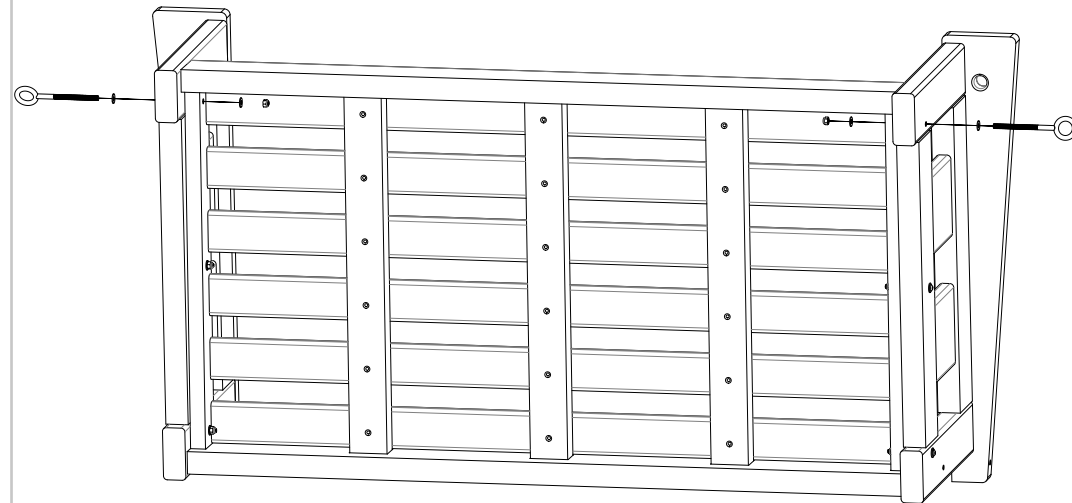


ASSEMBLY CONT.

STEP 2a. Position the Back Assembly, use remaining eye bolts to connect the Back Assembly to the arms of the swing.

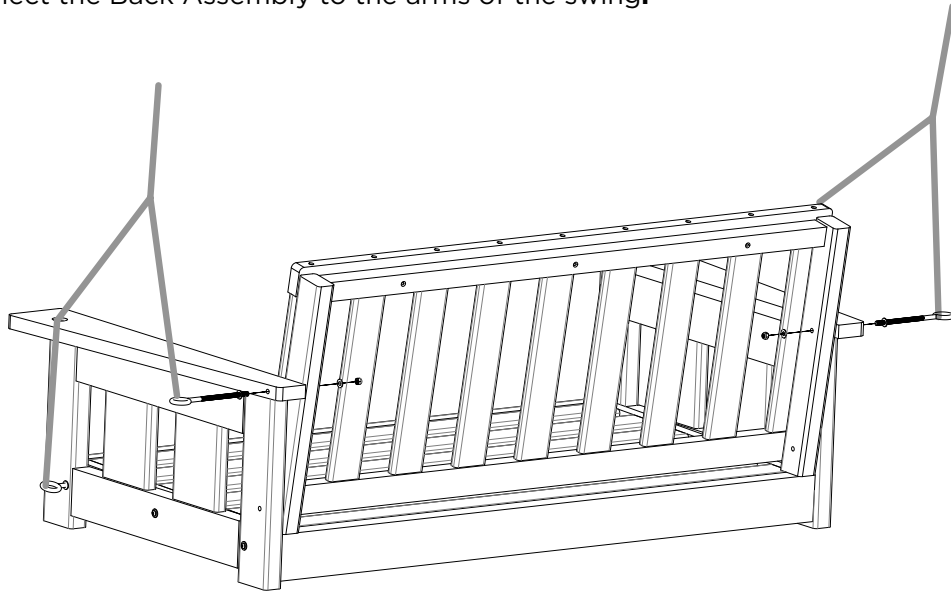


STEP 2b. Use (2) 2.5" Barrel Bolts to connect the bottom of the Back Assembly to the Arm Assemblies, tighten all bolts and nuts.

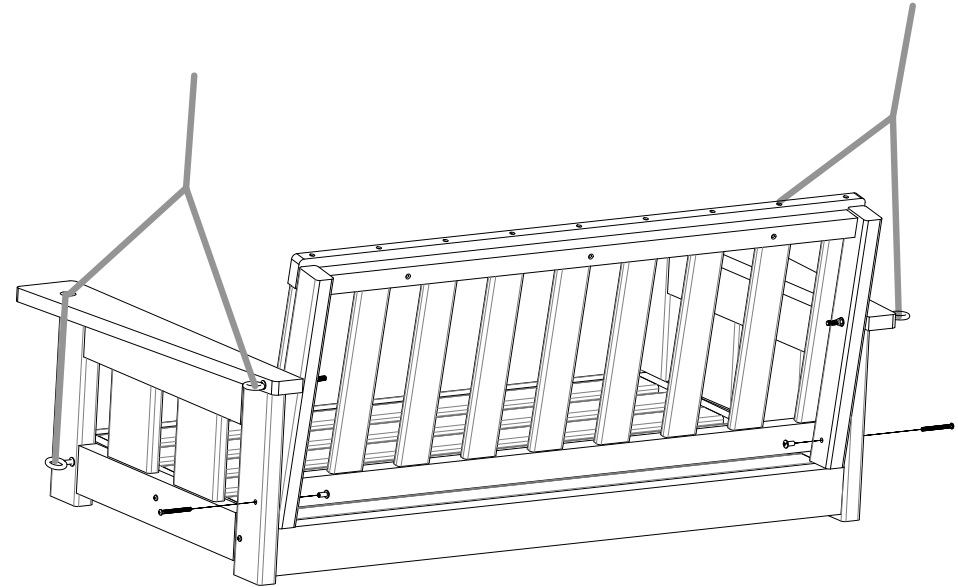

Note: Chain displayed upright for visibility, do not hang chain from ceiling mount until installation is complete.

STEP 3. Finished product. Hang chain from ceiling mounts.

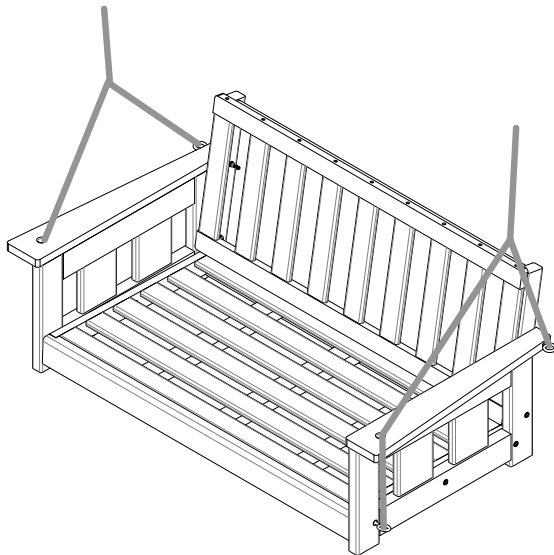

Congratulations on purchasing this Deep Seating Swing. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.

RESIDENTIAL WARRANTY - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call toll-free at 252-758-0641.

CONTRACTOR WARRANTY - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

MAINTENANCE - Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.

