



Durawood Chaise Lounge

CHAIR PARTS

HARDWARE PACK

14 - 2" Screws
 14 - 3" Bolts
 14 - Washers
 14 - Lock Washers
 14 - Nuts
 1 - Allen Wrench
 1 - Square Head Bit

Hardware Pack
 Weight 13.5 oz

Before beginning assembly, make sure you have all parts.
 Note that not all parts pictured are to scale.



REQUIRED TOOL (NOT PROVIDED)

- Rubber Mallet
- 1/4" Wrench
- Drill

Congratulations on purchasing this Durawood Chaise Lounge! You're going to love the quality, durability and simple assembly — plus the full Residential Lifetime Warranty. **QUESTIONS REGARDING THIS PRODUCT?** Call our customer-service line toll-free at (800) 643-3522.

ASSEMBLY

STEP 1. Assemble feet as shown (**FIGURE 1**) using 2" screws. Front Foot Assembly utilizes two Spreader Bars. (**FIGURE 2**) Note: you made need a mallet to seed pieces together. (**FIGURE 3**)




STEP 2. Place Chaise Lounge Base upside down on flat surface.

STEP 3. Align holes on Front Legs with holes at front of Chaise Lounge Base, making sure the angle of the Legs faces forward. **(FIGURE 4)** Attach using Bolts, Washer, Lock Washer and Nut, as shown. **(FIGURE 5)**

STEP 4. Repeat STEP 3 for Center Legs.

STEP 5. Repeat STEP 3 for Back Legs, but face legs towards back of Chaise Lounge. **(FIGURE 6)**

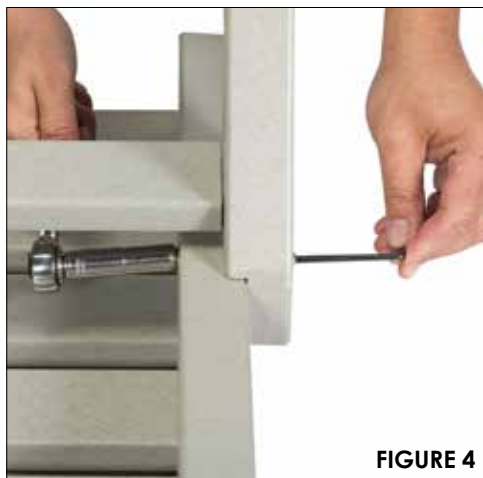

STEP 6. Locate Seat Back and Adjuster Arm. Align holes in both and secure using Bolts, Washers, Lock Washers and Nuts as shown. **(FIGURE 7)**

STEP 7. Turn Lounge Base on side. Align hole on completed Seat Back with hole in Lounge Base **(FIGURE 8)**. Secure using Bolts, Washer, Lock Washer and Nut as previously described in Step 3. Turn Lounge over and repeat for opposite side.

STEP 8. Locate one Lounge Arm Assembly, align with remaining holes on side of Lounge Base **(FIGURE 9)** and secure using Bolts, Washers, Lock Washers and Nuts. Turn chair over and repeat process for opposite side.

STEP 9. Tighten all hardware and enjoy your new Durawood Chaise Lounge.



RESIDENTIAL WARRANTY | This quality product includes a **FULL LIFETIME WARRANTY** for **RESIDENTIAL CUSTOMERS**. If damage occurs due to any splintering, rotting, cracking or peeling, within normal or acceptable use, The Hammock Source will replace this furniture, at no charge to you. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call toll-free at (800) 643-3522.

CONTRACTOR WARRANTY | **CONTRACTORS** receive a **FULL 7-YEAR WARRANTY**. Follow the same steps outlined above.