
DURAWOOD GLIDER




ASSEMBLY

STEP 1. Attach Glider Back to left and right arm assemblies using (4) 1.5" barrel bolts.

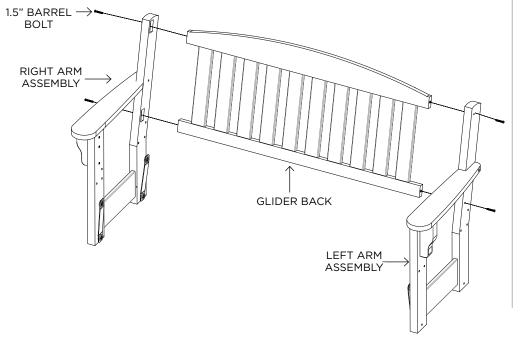


HARDWARE PACK

Hardware Pack Weight: 3.5 oz.

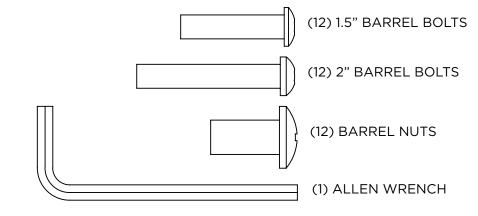

HARDWARE PACK 2

Hardware Pack Weight: 3.5 oz.

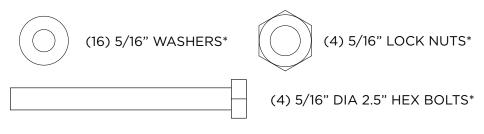

* Used for attaching to glider frame


CHAIR PARTS BOX 1	CHAIR PARTS BOX 2
GLIDER BACK	LEFT ARM ASSEMBLY
• GLIDER SEAT	RIGHT ARM ASSEMBLY
• (2) GLIDER LEG ASSEMBLY	
• (2) GLIDER FRAME SPREADER	
SUGGESTED TOOLS	

• RUBBER MALLET

• PHILLIPS HEAD SCREWDRIVER

• 1/2" WRENCH OR SOCKET

ASSEMBLY

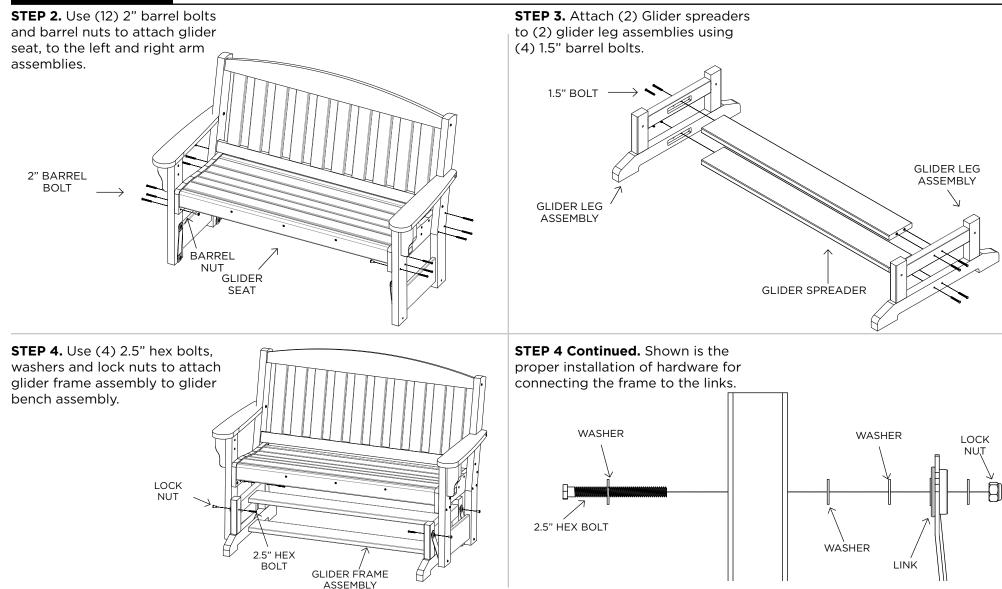

Congratulations on purchasing this Durawood Glider. QUESTIONS REGARDING THIS PRODUCT? Call our customer service team, 252-758-0641.

RESIDENTIAL WARRANTY - This quality product includes a LIMITED LIFETIME WARRANTY for RESIDENTIAL CUSTOMERS. In the unlikely event any splintering, rotting, cracking, peeling, or chipping should ever occur, The Hammock Source will supply replacement parts or replace the furniture, at no charge to you. This does not include negligence, improper use, animal damage or damage caused by natural disasters. When using around fire, keep furniture at a minimum distance of 30 inches from the heat source. Prevent prolonged exposure to chlorinated water. Note that an original sales receipt must accompany any returned product, along with a Return Authorization Number from Hammock Source customer service; call toll-free at 252-758-0641.

CONTRACTOR WARRANTY - CONTRACTORS receive a LIMITED 7-YEAR WARRANTY. Follow the same steps outlined above.

MAINTENANCE - Thoroughly inspect product before each use. Periodically check bolts after assembly and re-tighten when necessary.

