



# Deluxe Double Chair/Rocker

Congratulations on your purchase. You now have one of Nags Head Hammocks' innovative products! If you have any questions regarding this product, we invite you to call us 7 days a week at 800-344-6433.

Helpful tips before starting: • Get someone to help you. Some pieces are heavy and a second pair of hands always helps. • Do not tighten the bolts completely until the product is fully assembled. Some pieces are harder to fit in place and this will help. A hammer or rubber mallet is needed during assembly. • Do not over-tighten the bolts or screws. • Build your item close to where it will be used to eliminate difficulty in moving once completed. • For a uniform look, face all nuts in the same direction.




Item# NHDWDC



Item# NHDWDR

## Parts: Chair/Rocker

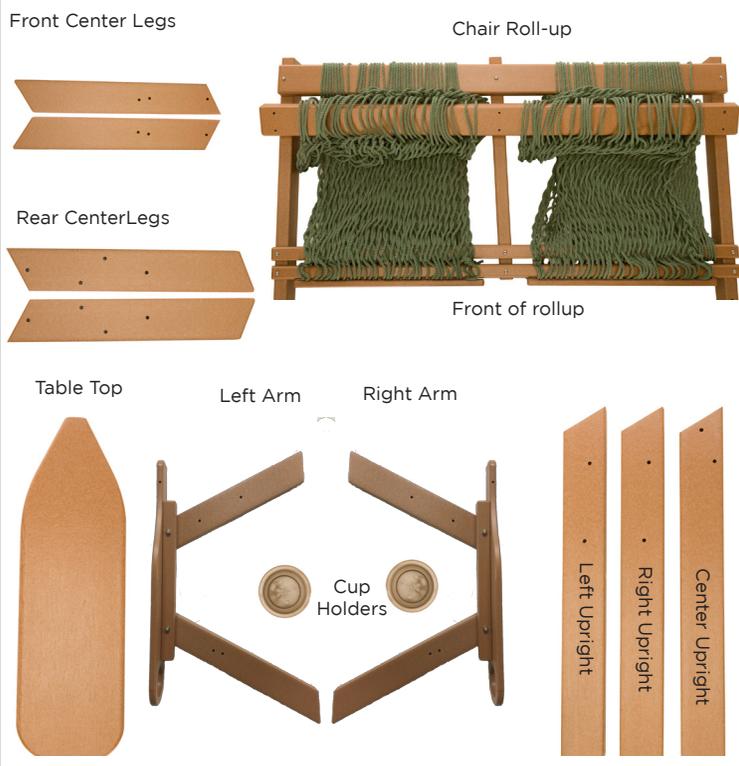

1. Align left arm with chair body. Large hole for cupholder should be at front of arm and aligned with holes at front of roll-up. Insert 3.5" hex bolt through washer, through arm and chair body. Secure using washer and nut. FIGURE 1. Use this same process for 2 holes on front leg, lower hole on back leg.

2. Repeat Step 1 for right arm.

3. Lay upper body roll-up to front of swing as shown. FIGURE 2



FIGURE 1



FIGURE 2

## Hardware

### Chair



Double Chair  
 7 - 5" x .25" Hex Bolts  
 8 - 3.5" x .25" Hex Bolts  
 30 - .25" Washers  
 15 - .25" Lock Nuts  
 6 - 4.5" x .25" Button Head Cap  
 8 - .75" Barrel Bolt Assemblies  
 2 - 4"x.25" Button Head Cap  
 1 - Allen Wrench

Barrel Bolts 4 1/2" and 4" (with Button Head Caps)


Hex Bolts 5" and 3 1/2"

### Rocker



Double Rocker includes this additional hardware:  
 2 - 5" x .25" Hex Bolts  
 4 - 3.5" x .25" Hex Bolts  
 12 - .25" Washers  
 6 - .25" Lock Nuts

## Additional Parts For Rocker

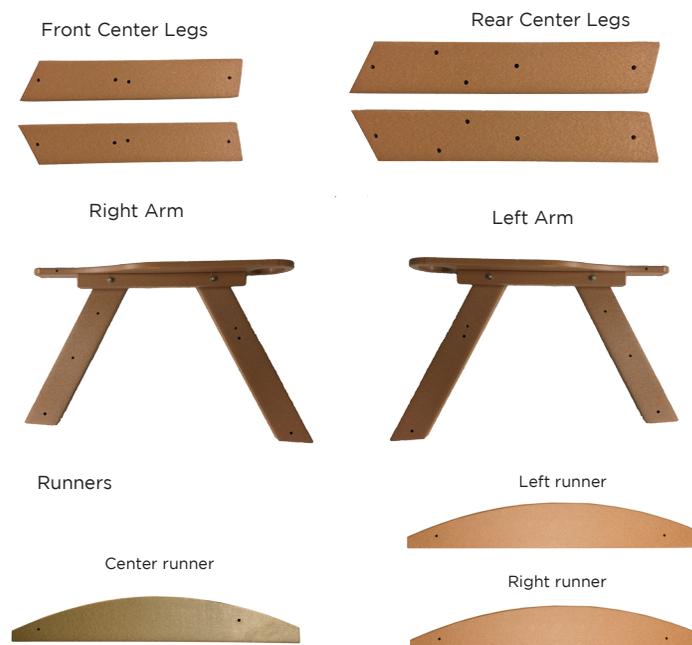

4. Attach left side upright with 3.5" hex bolt in bottom hole, making sure washers are touching both sides of upright. Secure with nut. FIGURE 3



5. Rotate left upright so that hole aligns with upper hole on rear arm of left leg assembly of chair and secure with 4" barrel bolt assembly. FIGURE 4



6. Repeat Steps 4 and 5 for right outside upright.

7. Attach front table legs ( one leg on each side of center support ) using 2 - 5" hex bolts and washers in bottom two holes. Make sure angle of foot matches photo. FIGURE 5



8. Attach back table legs (one leg on each side of center support) which are longer than front legs using 5" hex bolts and washers. FIGURE 6



9. Attach table top using 2 - 5" hex bolts and washers. FIGURE 7



10. Attach center upright with two 5" hex bolts. FIGURE 8



11. Starting with center upright, attach rollup with 4.5" button head bolt. FIGURE 9



12. Attach left upright with 4.5" button head bolt. FIGURE 10



13. Repeat step 12 for right side upright.

14. Insert plastic drink holders. FIGURE 11



15. Securely tighten all bolts.

16. Enjoy your new Nags Head Hammock Deluxe Double Chair. Continue to Step 17 if you have purchased the Nags Head Hammocks Deluxe Double Rocker.

**If you have purchased the Nags Head Hammocks Deluxe Double Rocker, continue with the following steps:**

17. Tilt rocker forward.

18. Attach left runner to front of rocker with one 3.5" hex bolt using one washer per side, securing with lock washer. Swing runner and align with back hole, attach with one 3.5" hex bolt with one washer per side, securing with lock nut. FIGURE 12 NOTE: Small ends of runners should face forward



19. Attach right runner to front of rocker with 3.5" hex bolt using one washer per side. Secure with lock nut. Swing runner and align with back hole, attach with one 3.5" hex bolt with one washer per side, securing with lock nut.

20. Attach center runner to front of rocker with 5" hex bolt using one washer per side. Swing runner and align with back hole, attach with one 5" hex bolt with one washer per side, securing with lock nut.

21. Securely tighten all bolts.

22. Enjoy your new Nags Head Hammock Deluxe Double Rocker.

*Care Instruction and Tips: Great care has been put into manufacturing this item. However, it is made of high density resin and some natural esthetic imperfections and dark spots are normal and should be expected. You can wash the wood and the rope using a hose and some bleach water. You can also brush the wood to help remove dirt. \*These instructions are also available at [www.nagsheadhammocks.com/assembly\\_instructions.asp](http://www.nagsheadhammocks.com/assembly_instructions.asp) Warranty: Products of Nags Head Hammocks are guaranteed to be free of defects in workmanship or material. We will replace defective parts for free. Simply call us and we will see that you get what you need. Prolonged exposure to weather conditions including snow, rain, and humidity are not covered under the warranty nor is damage caused by normal wear, mildew, improper care including storage, maintenance, and assembly. Returns: Nags Head Hammocks has a money back guarantee. If you are not satisfied with an item, return it unused in its original packaging for a complete merchandise refund or exchange. You can return it to any store or to our warehouse, Nags Head Hammocks, 305 Industrial Bd., Greenville, NC 27834. Please include a copy of your receipt and your contact information. Nags Head Hammocks, PO Box 533, Nags Head, NC 27959*